

# Operation Guide

## 1. Keypad instructions

- Press "0-9" buttons for codes
- Press "\*" for return or deletion
- Press "#" for confirmation or wake up
- There is a reset button on the back panel
- When lock is in sleep model, touch keypad, press two keys lighting blue, wake up the lock.

## 2. Quantity of card, code user

- Master code: 1 pcs ( 6-8 digits, default master code is 123456 )
- Card user : 100 pcs , index no. is 001-100
- Code user: 100 pcs , index no. is 001-100


## 3. Unlock method

- Code, card, card + code, mechanical key;


## 4. Door lock setting introduction

### 4.1. Change Master Code

#### Change the default master code

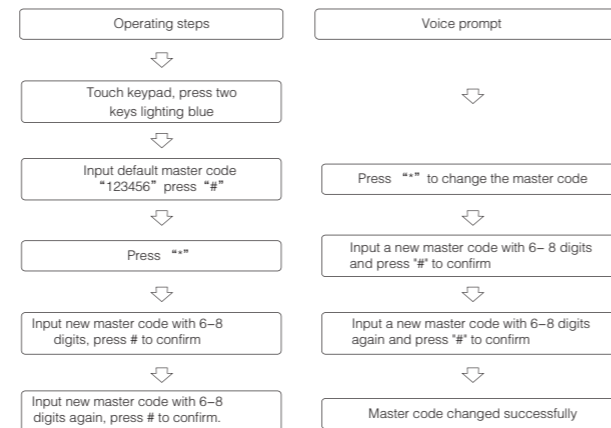


#### Change the default master code

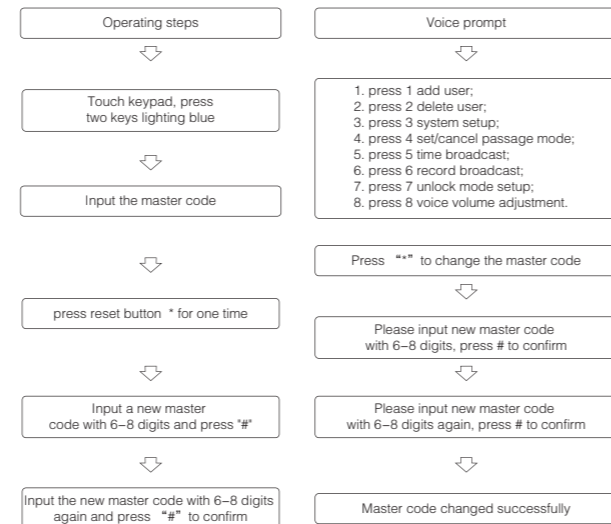


- Card, code can only be added after the factory default master code modified.
- New master code should be different with the default master code.
- When modify default master code, the first input code should be same with the second input code.

## 4.2 Add User Card

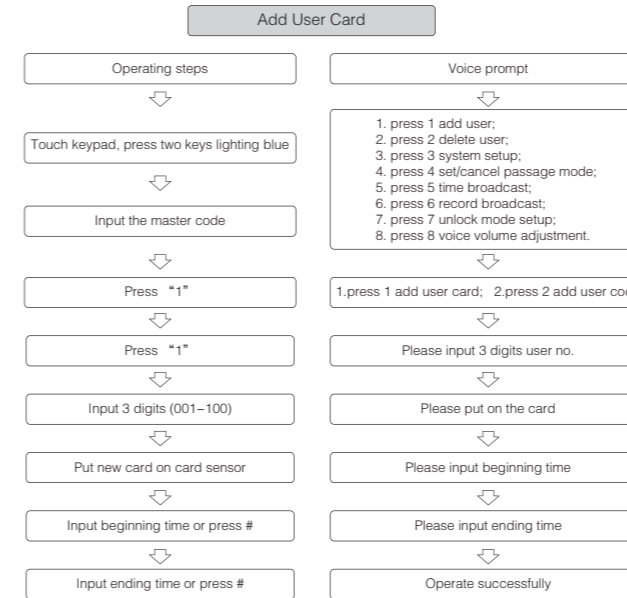


- Notes:
- In the card adding status, you can add more card users continually.
  - If you don't want card user with time restriction, please don't input time, press "#" directly.

## 4.3 Add User code

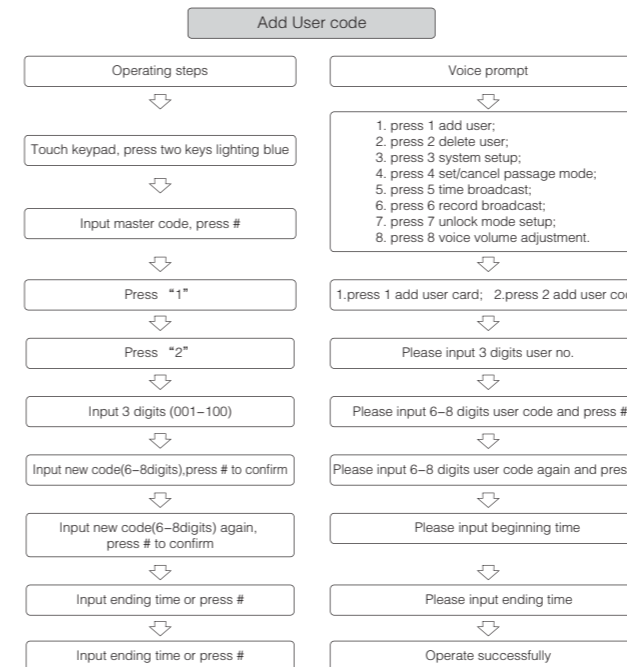


- Notes:
- In the user code adding status, you can add more code users continually.
  - If you don't want code user with time restriction, don't input time, press "#" directly.

## 4.4 Delete User Card

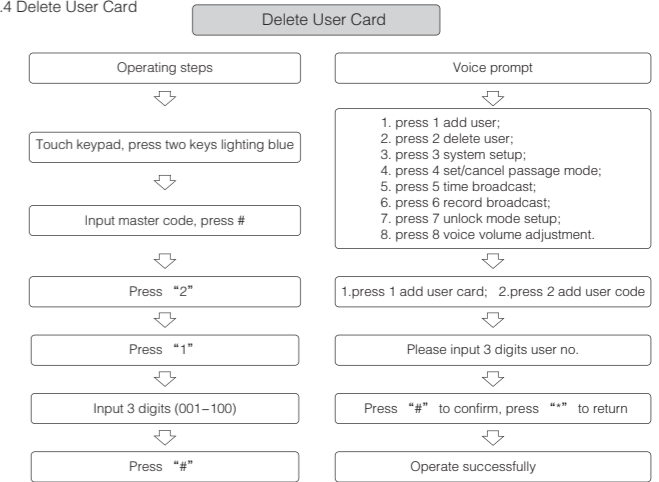

- Notes:
- In the card deleting status, you can delete more card users continually.

## 4.5 Delete User code

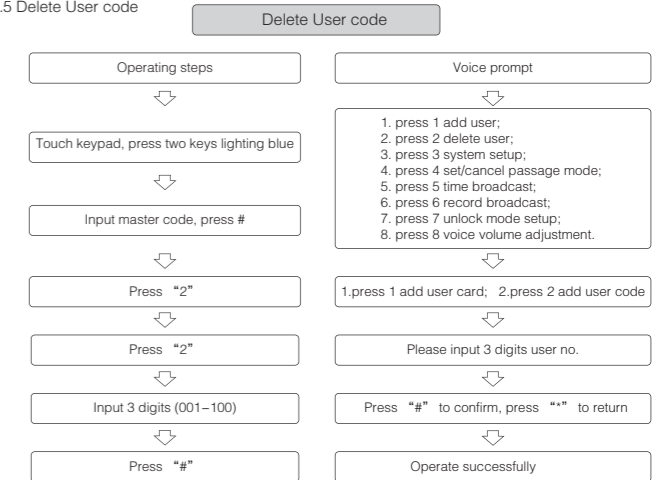


- Notes:
- In the password delete status, you can delete more user code continually.

## 5. Unlocking way

### 5.1 Unlock with card




### 5.2 Unlock with user code

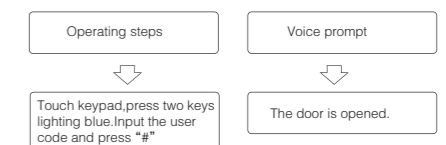

# User Manual


8015L-FMT

## Packing list

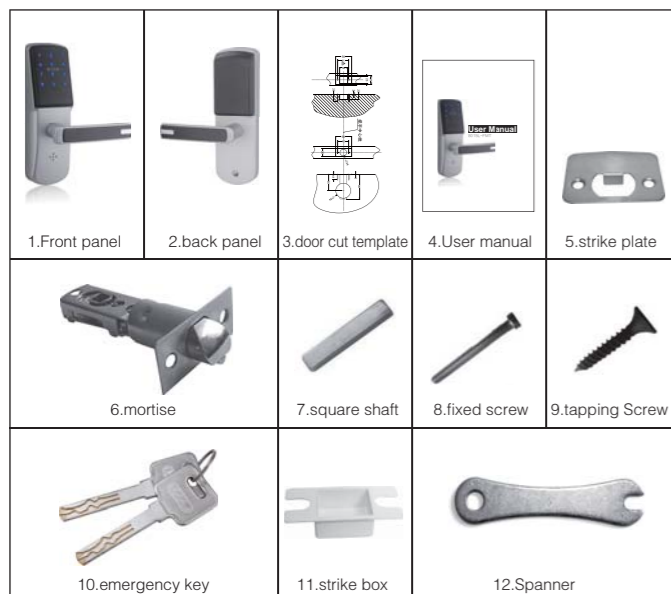


## 6. Door lock system setup


### 6.1 Door lock clock setup

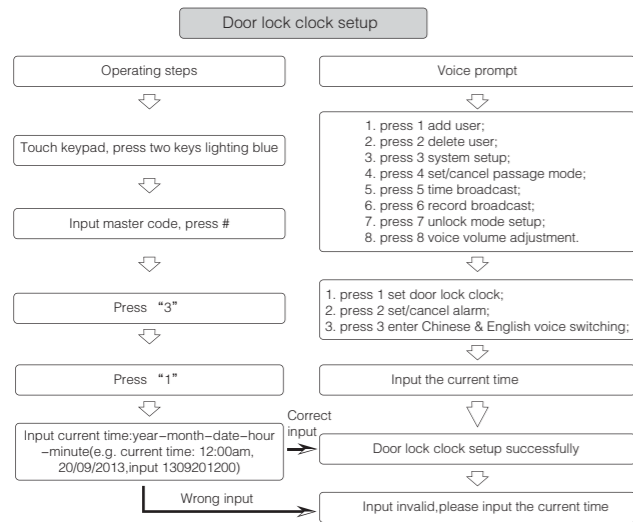


### 6.2 Door lock alarm setup/cancel

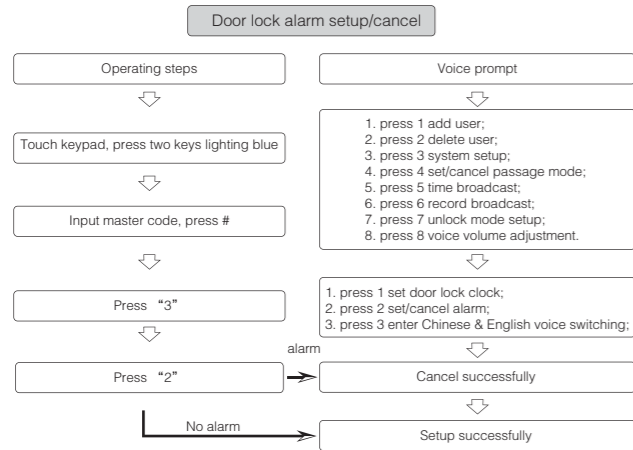


### 6.3 Chinese/English voice navigation switching

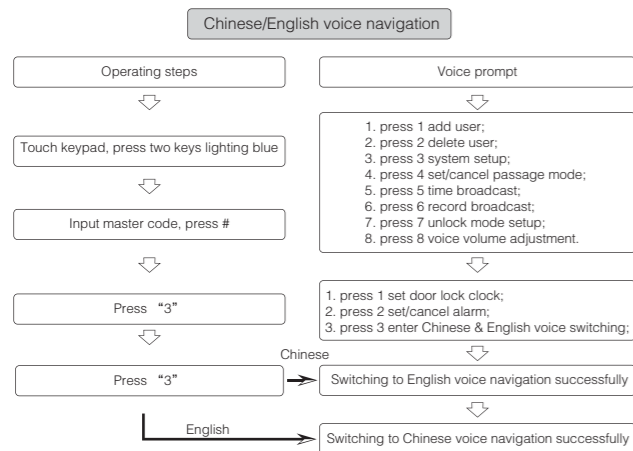


## 7. "Passage Mode" function setup/cancel

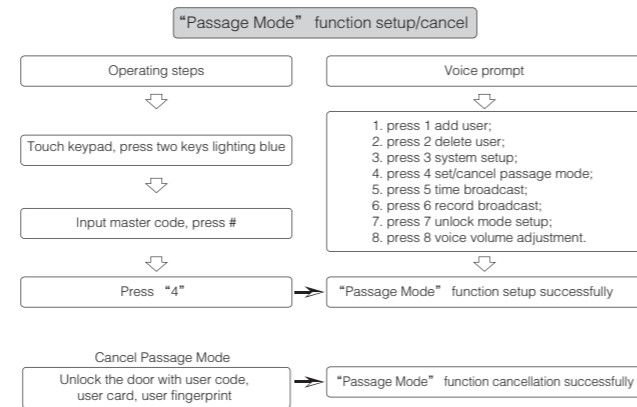


## 8. Door lock clock reporting

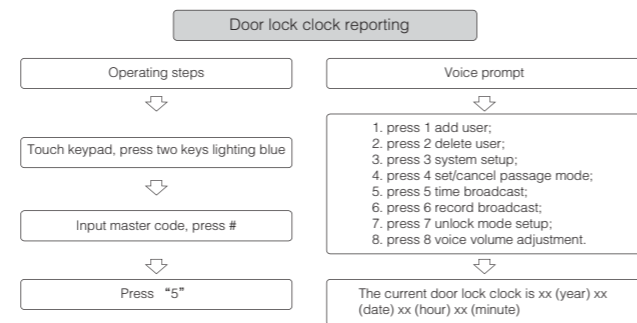

## 9. Door lock event record reporting

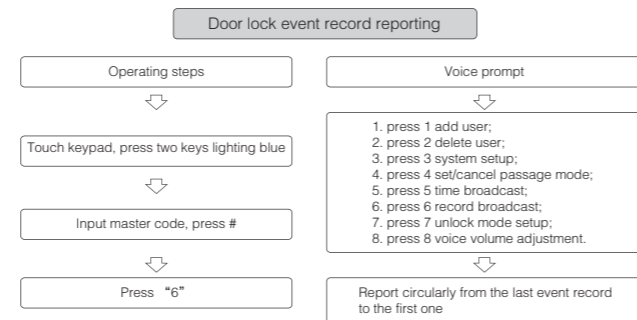


## 10. Door unlocking mode setup

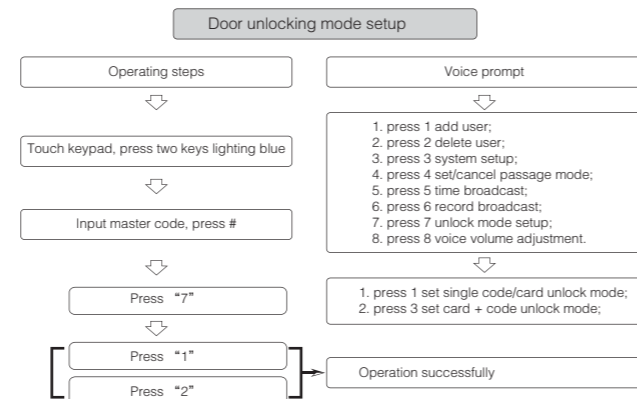

After setting, it just can be unlocked with the setting mode. For example, it set with card+code unlock mode, it cant unlock with code/card unlock mode. But it can be unlocked by Master code.

## 11. Voice volume adjustment

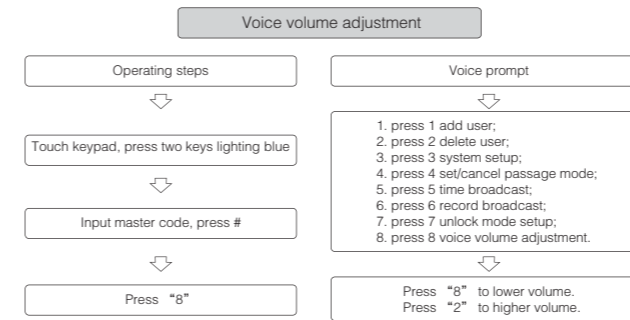

## 12. Restore factory defaults setting



### Notes:

- After the default master code is restored, it must be changed before user adding or deletion.
- After factory defaults are restored, the previously user cards/user codes will be deleted.


## 13. Malfunction prevention function

When 5 failed authentication attempt with unregistered code/fingerprint occur, the lock stops operating for 3 minutes.

## 14. Low battery alarm function

4 pieces AA Alkaline battery(6V), when battery voltage is lower than 5.0V, the door lock will sound a voice prompt "Low battery. Replace it".

## 15. Battery box & reset button

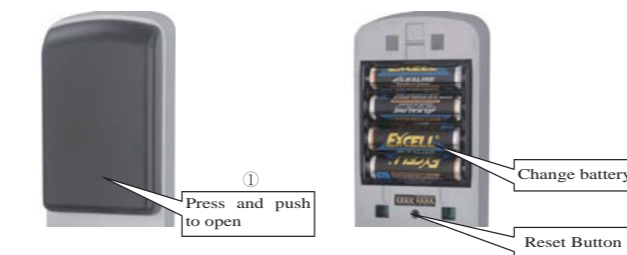

## 16. External power contact

